


# Post Wrap Installation Instructions

1) Measure the height of the post that is going to be wrapped. Subtract 1/8" from your measurement to allow for expansion. Cut all four pieces of the post wrap to length.


2) Align and connect two of the post wrap pieces by snapping together around the post. Press firmly until the two parts fit snug. Remove the assembled piece and set aside.

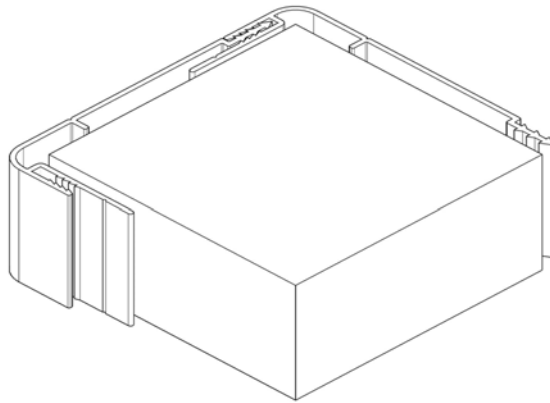

3) Repeat step #2 with the remaining two pieces of post wrap. Once completed do not remove the assembled parts. Clamp these two pieces in place on the post.

4) Retrieve the other assembled parts put together in step #2. Slide them onto the post and align with clamped post wrap.

5) Snap both pieces together by pressing firmly for a snug fit around the post.

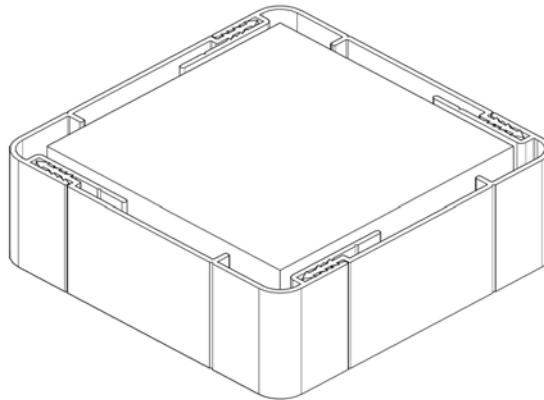

6) Install desired post skirts on top and bottom of post.